

SL800 (SL150A08) spare parts list

序号	英文名称	材质及规格	ORDER
1	handle upper cap	PP	
2	handle lower cap	PP	
3	left decorate board	ABS	
4	middle frame	PP	
5	on/off button	ABS	
6	CW button	ABS	
7	spring for button	碳素弹簧钢	
8	dust cap clip	ABS	
9	dust indicator tube	透明ABS	
10	dust indicator	ABS	
11	dust indicator cover	ABS	
12	safety valve hut	EPDM	
13	safety valve	ABS	
14	spring for safety valve	碳素弹簧钢丝	
15	safety valve base	ABS	
16	internal wheel for CW	PP、CaCO3各50%	
17	right decorate board	ABS	
18	switch	<1600 KAG-01 8A(横脚)>1800 KAN-L1 10A(横脚)	
19	switch base		
20	motor channel	PP	
21	motor cover channel sealing ring	PVC	
22	motor cover inlet sealing ring	PVC	
23	exhaust grill	PP	
24	exhaust hepa filter	F6级滤芯	
25	motor cover	PP、CaCO3各50%	
26	motor upper suspension	EPDM	
27	spring for stop wheel	碳素弹簧钢丝	
28	stop wheel filter	ABS	
29	stop core	PA6	
30	stop wheel	橡胶	
31	CW ASSY	PP、CaCO3各50%	
32	CW side board	PP、CaCO3各50%	
33	big/small copper ring	ABS	
34	Motor	800W	
35	motor lower suspension	EPDM	
36	(800W)motor lower suspension board	PA6	
37	motor lower cover	P P	
38	plug recess	PP	
39	PCB ASSY	无调 1600借用SL201, >1800用 最新改进板	

40	rear wheel	PP	
41	base	PP	
42	sound absorber	阻燃毛毡	
43	front wheel base	P A 6	
44	front wheel		
45	handle	ABS	
46	dust cup cap	ABS	
47	sponge	海绵	
48	dust base	ABS	
49	mesh filter core	PP	
50	second cyclone drum	PP	
51	air channel sealing ring	PVC	
52	air channel sealing slice	EVA	
53	air channel	PP	
54	sealing ring	EVA	
55	mesh filter	PP	
56	dust cup	透明ABS	
57	dust base switch	ABS	
58	sealing ring	PVC	
59	sealing ring	PVC	
60	dust base	ABS	
61	telescopic tube	470MM	
62	hose assy	EVA	
63	brush		
64	upholstery nozzle	PP	
65	crevice nozzle	PP	