


YD4 110油锯普通款爆炸图

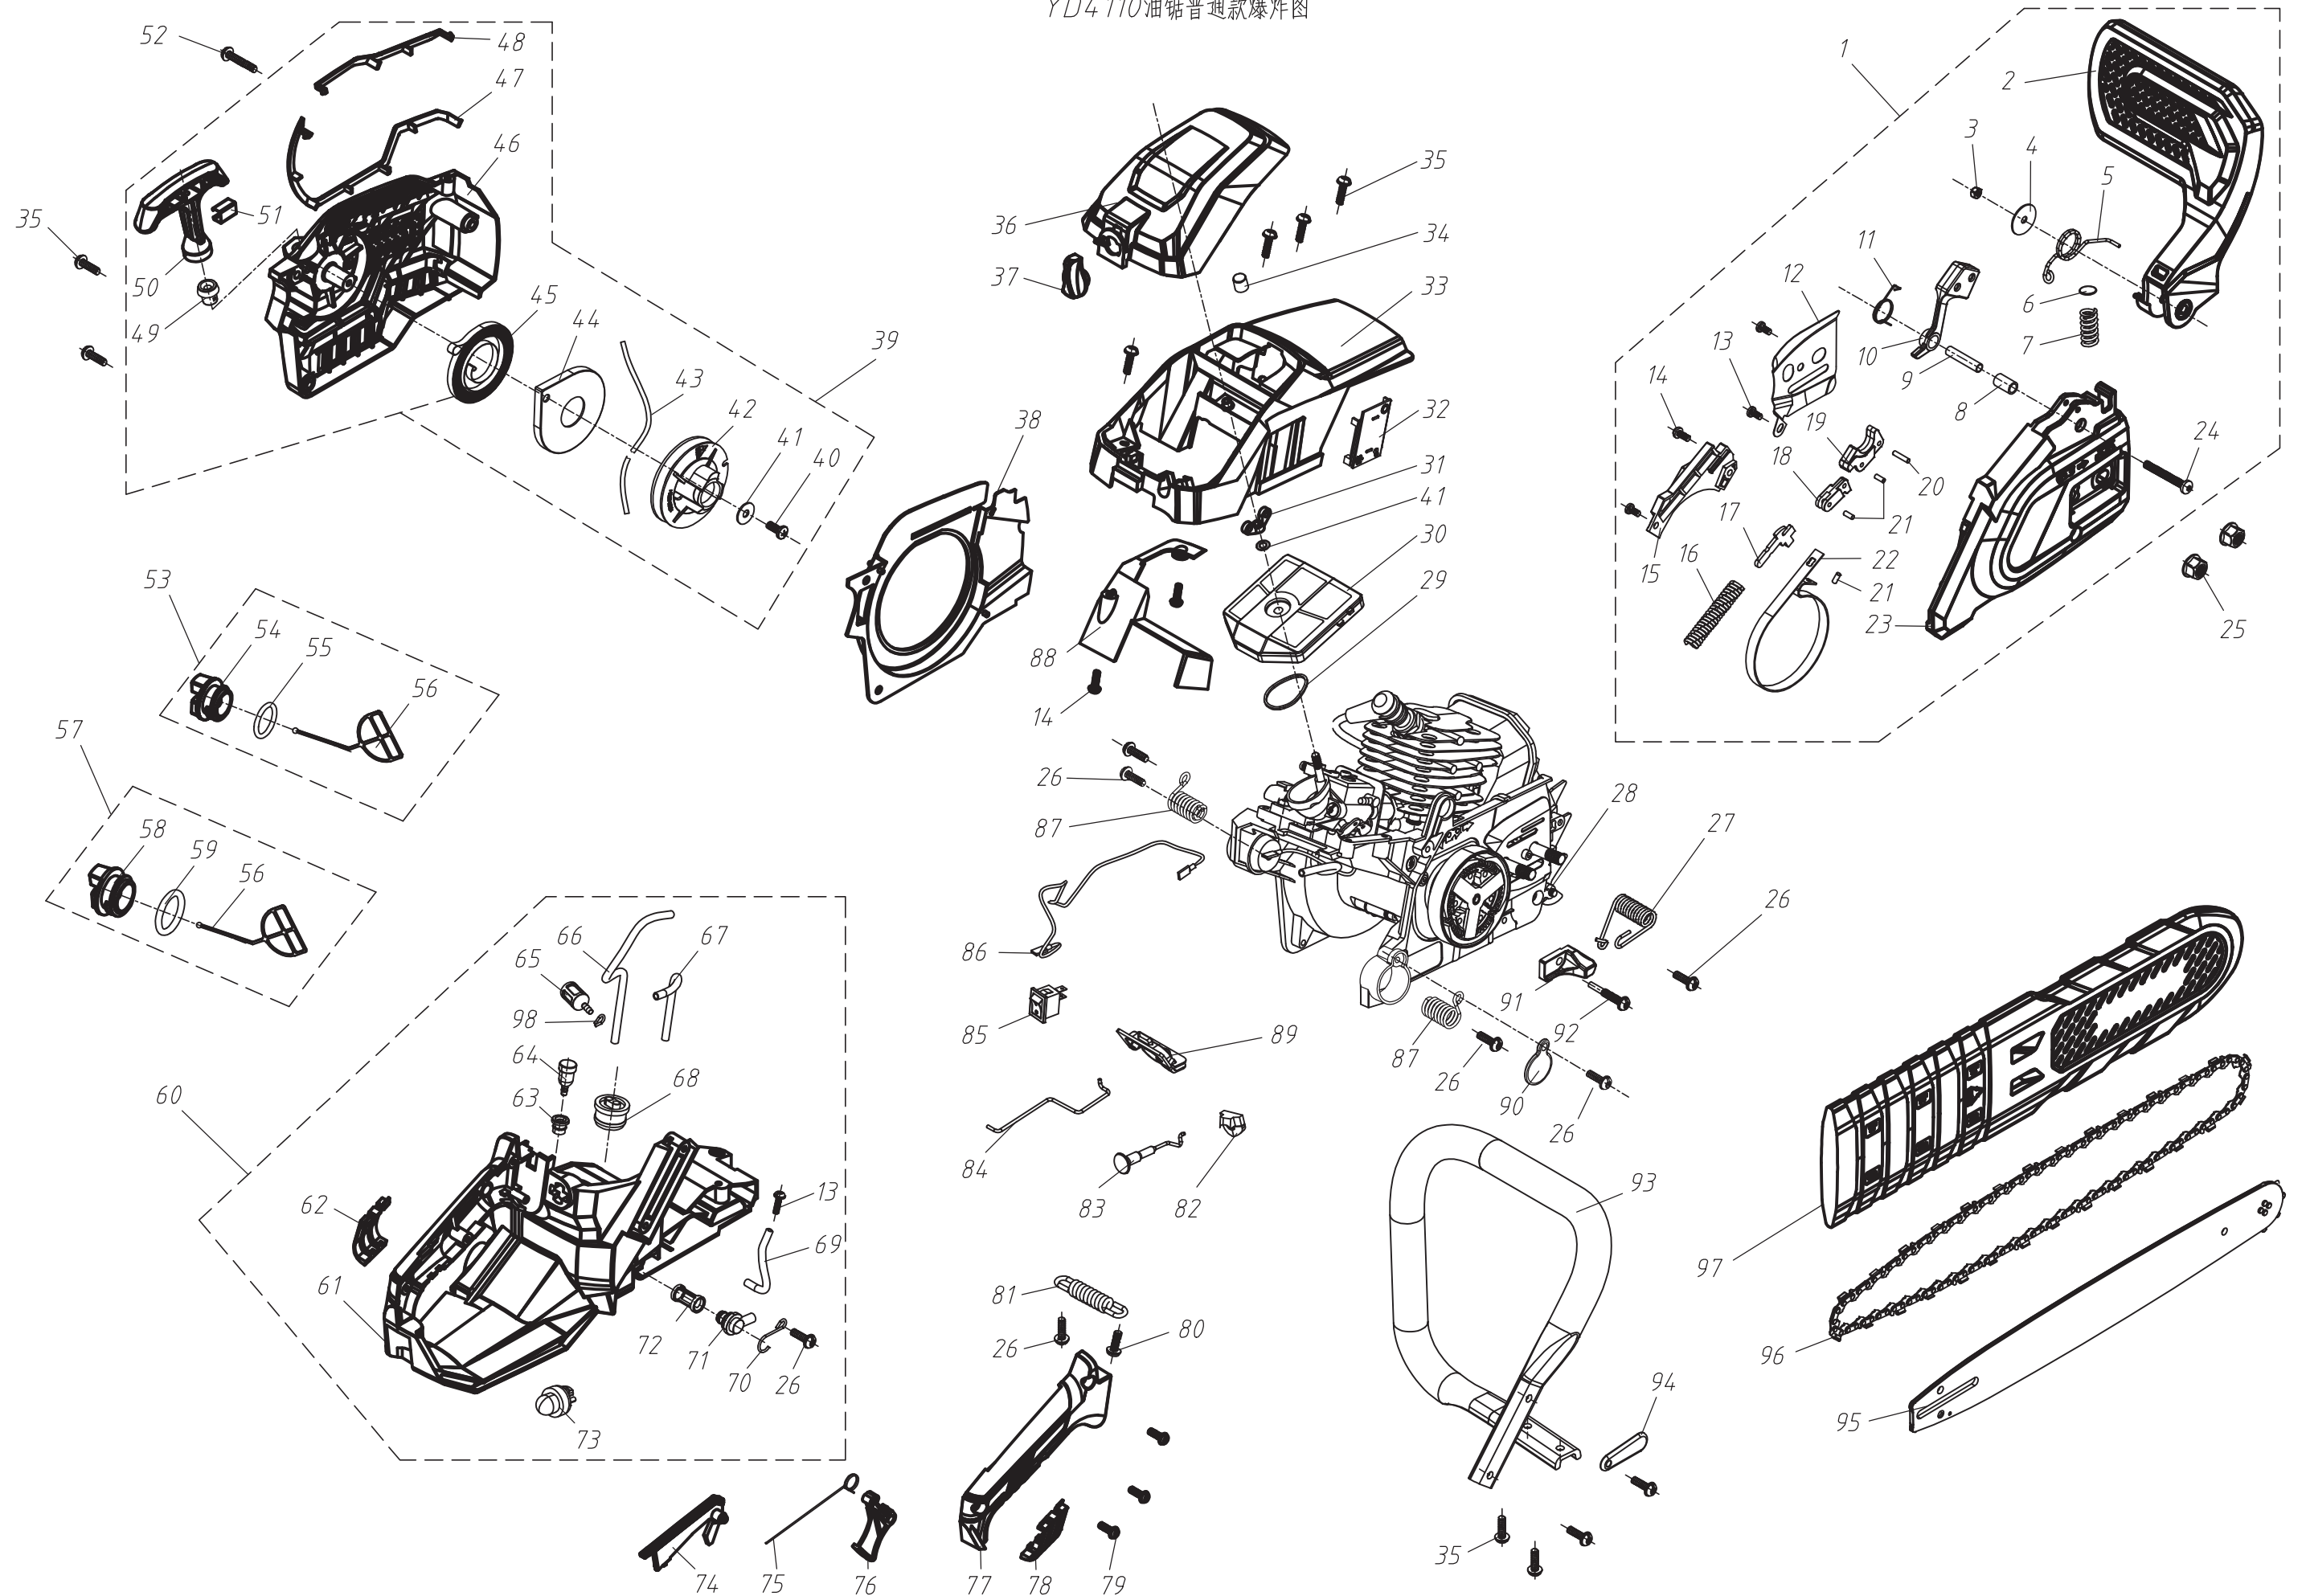

YD4110 Chain Saw				Page:1/4
No.	Part num	Description(Cn)	Description(En)	Qua.
1	YD-3810.04	刹车板总成	Brake Assy	1
2	YD-3810.04-04	前挡板	Brake Conductor	1
3	GB/T889.1-2000	1型非金属嵌件六角锁紧螺母	Nut M5	1
4	YD-38.04-05	平垫片 5X23X1.5	Washer 5X23X1.2	1
5	YD-38.04-03	刹车扭簧	Spring	1
6	YD-38.04-06	缓冲弹簧盖板	AV Spring Plate	1
7	YD-38.04-07	缓冲弹簧 2X10X26	AV Spring 2X10X26	1
8	YD-38.04-02	重锤套管	Pin	1
9	YD-38.04-01	前挡板套管	Pin	1
10	YD-38.04.01	刹车板重锤	Brake Balance weight	1
11	YD-38.04-09	重锤扭簧	Spring	1
12	YD-38.04-10	张紧器盖板	Tensioner Cover	1
13	GB/T845-1985	十字槽盘头自攻螺钉 ST4X8	Screw ST4X8	3
14	GB/T845-1985	十字槽沉头自攻螺钉 ST4X10	Screw ST4X10	4
15	YD-38.04-11	主弹簧盖板	Brake Spring cover	1
16	YD-38.04-12	刹车板主弹簧 2X9X71	Brake Spring 2X9X71	1
17	YD-38.04-13	刹车控制臂	Brake Knee	1
18	YD-38.04-14	副杠杆	Knee Link Back	2
19	YD-38.04-15	主杠杆	Brake Knee link Front	1
20	YD-38.04-16	圆柱销 φ3X14	Pin φ3X14	1
21	YD-38.04-17	圆柱销 φ3X8.8	Pin φ3X8.8	3
22	YD-38.04-18	刹车带	Brake Steel	1
23	YD-3810.04.02	刹车板	Clutch Cover	1
24	GB/T2672-2004	内六角花型盘头螺钉 M5X40	Screw M5X40	1
25	GB/T6177.1-2000	六角法兰面螺母 M8X1.25	Nut M8X1.25	2
26		开槽内六角花型盘头自攻螺钉 ST5X14	Screw ST5X14	7
27	YD-38-01	提把扭簧	Handle AV Spring	1
28	YD-41.01	YD4 汽油动力总成（普通）	Chain saw power assembly	1
29	YD-38-02	空滤器垫圈	Air Filter Gasket	1
30	YD-38.07	空滤器	Air filter	1
31	GB/T62.1-2004	蝶形螺母	Nut M5	1
32	YD-38-03	防冻板	Stop Wind Plate	1
33	YD-3810-06	大盖	Top Cover	1
34	YD-38-05	空滤器减震	Air Filter Anti Vib	1
35		开槽内六角花型盘头自攻螺钉 ST5X16	Screw ST5X16	10
36	YD-3810-07	小盖	Air Filter Cover	1
37	YD-3810-08	小盖旋钮	Air filter cover Nut	1
38	YD-3810-09	导流罩	Air Fairing	1
39	YD-3810.02	启动器总成	Motor starter assembly	1
40	GB/T845-1985	十字槽盘头自攻螺钉 ST5X12	Screw ST5X12	1
41	GB/T96.1-2002	平垫片 5X16X1	Washer 5x16x1	2
42	YD-38.02-01	普通款绳轮	Pulley	1
43		启动绳(两根内芯) 3X900	Start Line 3X900	1
44	YD-38.02-02	盘簧座	Coil spring seat	1
45	YD-38.02-03	启动盘簧	Coil spring	1
46	YD-3810.02-01	普通款启动器罩	Starter Cover	1
47	YD-3810.02-02	启动器罩装饰左盖	Starter decorative left cover	1
48	YD-3810.02-03	启动器罩装饰右盖	Starter decorative right cover	1
49	YD-38.02-05	过绳套	Sleeve	1

YD4110 Chain Saw				Page:2/4
No.	Part num	Description(Cn)	Description(En)	Qua.
50	YD-3810.02-07	启动手柄	Starter handle	1
51	YD-3810.02-08	启动拉绳盖板	Starter handle cover	1
52		开槽内六角花型盘头自攻螺钉 ST5X20	Screw ST5X20	1
53	YD-3810.11	燃油盖总成	Fuel oil cap assembly	1
54	YD-3810.11-01	燃油盖	Fuel oil Cap	1
55	GB/T3452.1-1992	O型圈 22X4	Rubber Washer 22X4	1
56	YD-38.11-02	防掉网拍	CE Line	2
57	YD-3810.12	机油盖总成	Machine oil cap assembly	1
58	YD-3810.12-01	机油盖	Machine oil cap	1
59		油壶盖小垫圈	Rubber Washer 20X3.5	1
60	YD-3810.03	油壶总成	Oilcan assembly	1
61	YD-3810.03.01	油壶	Oilcan	1
62	YD-3810.03.-01	油壶座装饰盖	Oilcan decorative cover	1
63	YD-38.03-03	平衡器座	Valve Mount	1
64	YD-38.03.02	平衡器	Filter Valve	1
65	YD-38.03.03	燃油滤	Filter	1
66	YD-38.03-04	燃油管\5x205	Fuel Pipe 5x205	1
67	YD-38.03-05	回油管\5x95	scavenge pipe	1
68	YD-38.03-06	燃油管座\双孔	Fuel Pipe Mount	1
69	YD-38.03-08	负压管 5X65	Rubber Pipe 5X65	1
70	YD-38.03-10	机油密封座挡圈	Oil Filter Mount bead flange	1
71	YD-38.03-09	机油密封座	Oil Filter Mount	1
72	YD-38.03.04	机油滤网	Oil Filter	1
73	YD-38.03.05	油泡	Gas Pump	1
74	YD-3810-01	油门扳机控制臂	Trigger Catcher	1
75	YD-38.03-01	扳机扭簧	Trigger Spring	1
76	YD-3810-02	油门扳机	Trigger	1
77	YD-3810-03	后手柄盖	Rear Handle cover	1
78	YD-3810-04	后手柄盖装饰盖	Rear Handle decorative cover	1
79	GB/T845-1985	十字槽盘头自攻螺钉 ST4X12	Screw ST4X12	3
80		开槽内六角花型盘头螺钉 M5X14	Screw M5X14	1
81	YD-38-12	油壶固定弹簧	Spring	1
82	YD-38-13	风门拉杆座	Choke Rod Mount	1
83	YD-38.10	风门拉杆	Choke Rod	1
84	YD-38-14	油门推杆	Carburetor Rod	1
85		熄火开关	Switch	1
86	YD-38.13	红导线	Red wire	1
87	YD-38-22	减震弹簧	torsional spring	2
88	YD-3810-05	大盖导风罩	Top covertop cover	1
89	YD-38-18	油门推杆座	Carbureter scavenge pipe	1
90	YD-38-23	减震弹簧盖板	torsional spring cover	1
91	YD-38-24	挡链块	Chain Cacher	1
92	YD-38-25	挡链块螺钉	Chain Cacher Screw	1
93	YD-38.09	提把总成	Front Handle	1
94	YD-38-20	提把衬片	Front Handle Spring Plate	1
95	YD-38.05	导板	Guide board	1
96	YD-38.06	链条	Chain	1
97	YD-3810-21	导板套	Slipcover	1
98		燃油管卡簧		1